

Mars AC Installation

Automatic Curtain Installation Guide

Part	Quantity
- Curtain rail.	1
- Driving wheel end block	1
- Driven wheel end block.	1
- Pullies.	2
- Metal curtain blocks.	2
- Track Motor.	1
- Strap.	Depends on system length.
- Rail Connecting Brackets.	Depends on system length.
- Curtain Hooks.	Depends on system length.
- Wall & Ceiling Brackets.	Depends on system length.

Required Tools
- Drill with 6mm drill bit.
- Measuring Tape.
- Cross/Phillips head screw driver.
- Hand Saw.
- Pliers.
- Pencil.
- Spirit Level. (optional)

Ireland

Eeziglide, Unit 278, Block F, Blanchardstown Corporate Park, Ballycoolin, Dublin 15, Ireland
tel: +353 (0)1 897 5350 email: info@easiglide.com


United Kingdom

Eeziglide, Unit 2, Station Approach, Wendover, Buckinghamshire, HP22 6BN
tel: +44 (0)203 051 6304 email: info@easiglide.com

Curtain Assembly

Please follow the following instructions to assemble your curtain.

1 - Joining Rails.

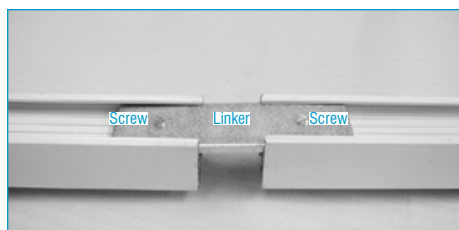


If needed, you may join rails by simply using the supplied track linkers. Using a flat head screw driver, tighten the linker screws until the rails are securely fastened together.

2 - Cutting the strap.




Measure the total length of the rail(s).
Strap = 2 x total length of rail(s) + 190mm

3 - Assembly.

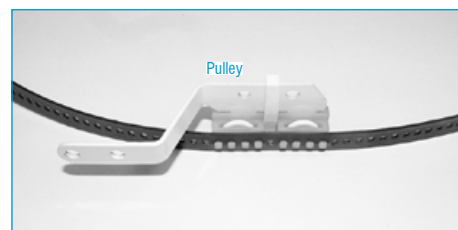


Attach one of the pulleys to the middle of the cut strap length. You may need to use a small flat head screw driver to ensure that the pulley is adequately buttoned in to the strap.

4 - Assembly.

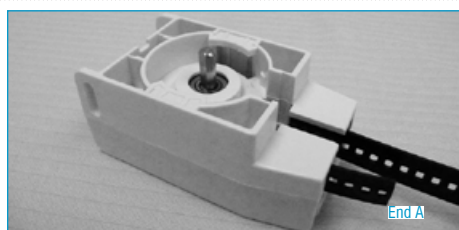


Feed the strap through the driving wheel.

5 - Attaching the pulley system.

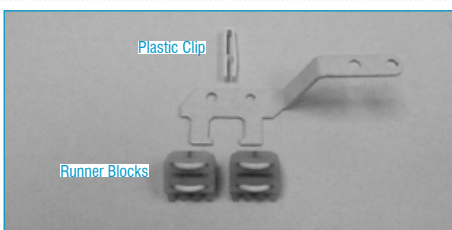


Remove the plastic clip from the middle of the second pulley. Push the two runner blocks together and they will detach from the pulley.

6 - Attaching the pulley system.

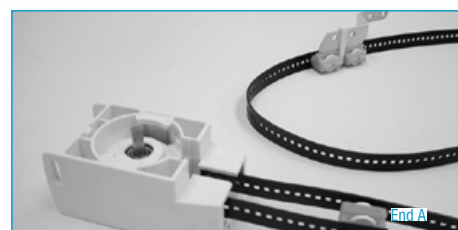


Attach one of the runner blocks to the end of the strap

7 - Attaching the pulley system.

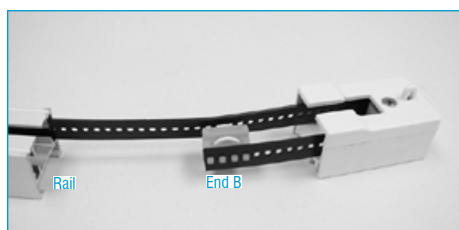


Feed ends A and B through the rail, then feed end B through the driven wheel and attach the final runner block.

8 - Attaching hooks and blocks.

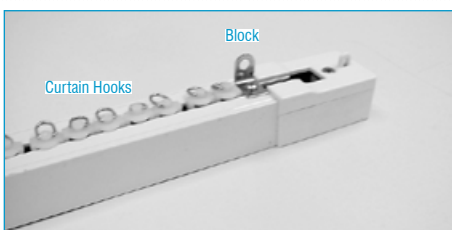


Attach the required number of curtain hooks to each side of the rail. This number equates to the number of "cup hooks" attached to each curtain

9 - Fix End caps in place.

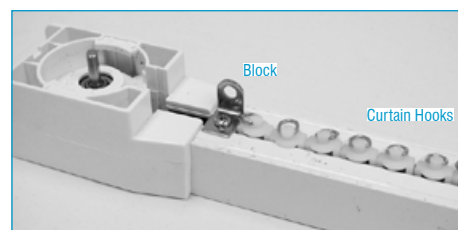


Now insert blocks onto each end of the rail. Ensure that the two metal curtain blocks are screwed securely in place. Then slide the Driven Wheel and Driving Wheel onto the rail.

10 - Joining the strap ends.

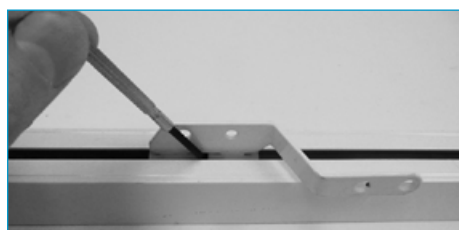


The remaining pulley can now be attached to the two open runner blocks. Push the two runner blocks away from each other with a small flat head screw driver to lock into place.

11 - Joining the strap ends.

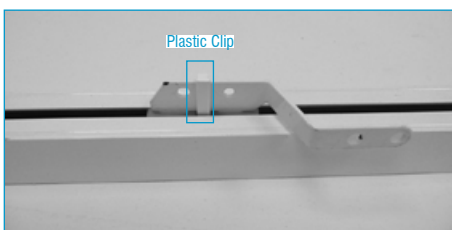

Re-attach the plastic clip onto the middle of the pulley.

12 - Attaching the motor.

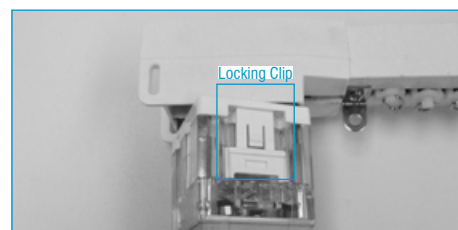

Align the motor at slightly less than a 90 degree angle to the rail. Push the motor firmly up and rotate into position. Lock the motor in place with the locking clip.

Mars AC Installation

Instructions

www.automaticblindsdirect.com

Wall Mounting

- The brackets should be mounted about 20 cm from the ends of rails and no more than 100cm apart.
- Mark the bracket positions on the wall.
- Drill the holes needed to secure the screw.



- After securing the brackets to the wall, position the rail connecting brackets inside the top edges of the rail.



- Turn the mounting brackets clockwise to lock them in position.



- Now lift the entire system up and screw the rail mounting brackets to the wall brackets.

Ceiling Mounting

- Attach the mounting brackets as shown above.
- Mark positions for screw-holes.
- Drill the holes for the screws.
- Lift the entire system and screw into place.

Wiring the control box.



Motor Wiring:

B - Live Wire
F - Live Wire
N - Neutral
E - Earth

Power Wiring:


N - Neutral
L - Live Wire
E - Earth

Colour:

Green - Neutral
Black - Live Wire
Brown - Live Wire
Yellow/Green - Earth

Remote control & channels.

The remote control must be used with the RF Control Box.

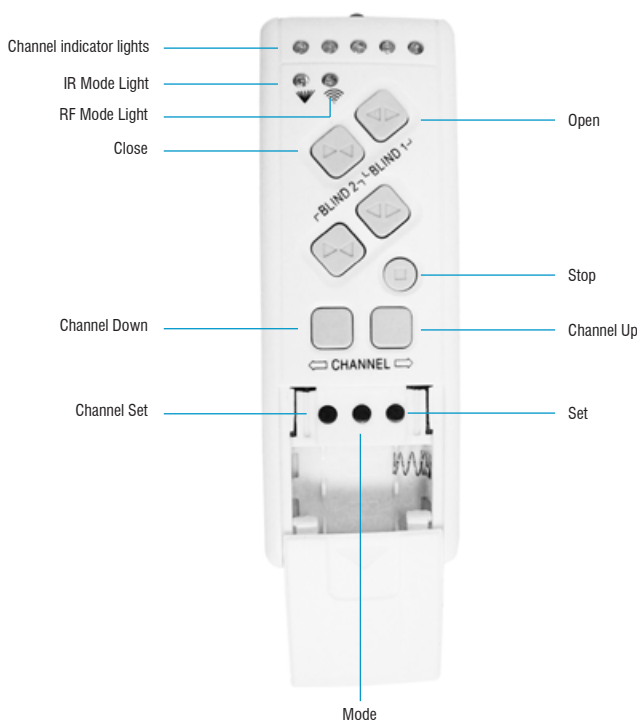


Set a Channel:

- Power on the motor and complete the next step within 20 seconds of hearing the short start-up beep.
- Press **Channel Up** or **Channel Down** to select the correct channel from the channel indicator lights at the top of the remote control.
- Hold down **Channel Set** until there is a long beep.

Set multiple motors to the same Channel:

- Set the Channel for each motor as above, making sure only one motor is powered on at a time and that the same channel is selected for all motors.

Setting opening and closing limits.

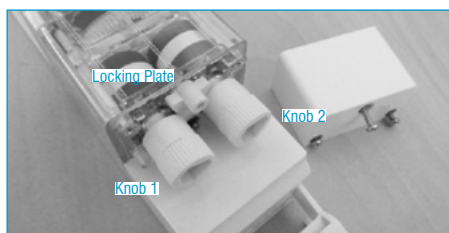

Knob 1 - Opening limit.
Knob 2 - Closing limit.

Remove the white cover from the bottom of the motor. There are two knobs and in between these a locking plate.

- Drive the pulley all the way open to where you want the limit to be.
- Slide the locking plate away from the knob you are setting the limit for.
- Push the knob up and rotate clockwise until the red/white grooves slide into the locking teeth. When they slide into place there will be an audible click. Pull the knob down to set the current curtain state to a limit.
- Slide the locking plate to the home position between the two knobs.
- Repeat for the closing limit.