

Venus Installation

Automatic Blind Installation Guide

Part	Quantity
- Aluminium Tube.	1
- Tubular DC Motor.	1
- Motor End Cap.	1
- Tube End Cap.	1
- Remote Control.	1
- Mounting Brackets.	2

Required Tools
- Drill with 6mm drill bit.
- Measuring Tape.
- Cross/Phillips head screw driver.
- Hand Saw.
- Pliers.
- Pencil.
- Spirit Level. (optional)

Ireland

Eeziglide, Unit 278, Block F, Blanchardstown Corporate Park, Ballycoolin, Dublin 15, Ireland
tel: +353 (0)1 897 5350 email: info@easiglide.com

United Kingdom

Eeziglide, Unit 2, Station Approach, Wendover, Buckinghamshire, HP22 6BN
tel: +44 (0)203 051 6304 email: info@easiglide.com

Blind Assembly

Please follow the instructions to assemble and mount your blind.

- Measure and cut the aluminium pole to the desired length.
- Fasten your blind to the aluminium tube using double sided tape or Velcro. You may use a different method depending on your type of blind.

1 - Preparing the blind.



Insert the motor into the aluminium tube.


2 - Preparing the blind.



Insert the end cap into the other end of the aluminium tube.

Mounting the blind.

1 - Motor-End Bracket

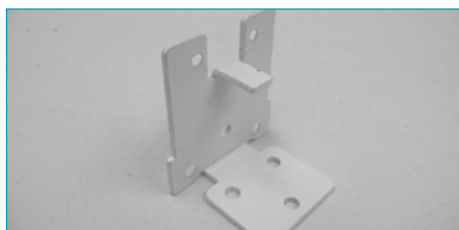

The protruding part of the motor end bracket will slide into the thin rectangular opening in the motor.

2 - Round Bracket




The end cap on the tube end will then slide into the tube end bracket.

- The two supplied brackets are used to attach the system to your wall.
- Carefully measure the correct distance for two brackets and screw into place. It is advisable to attach both brackets to the system and mark on the wall where the screws will need to go. At this stage it is prudent to ensure that the brackets are level. If possible, you can measure the distance from each bracket to the ceiling to ensure that they are even.
- Screw the brackets to the wall.
- When the brackets are in place lift the blind up and insert the motor end into the corresponding bracket. With this in place end cap on the tube end will then slide into the tube end bracket.

Powering the blind.


1 - Attach the Power Supply.

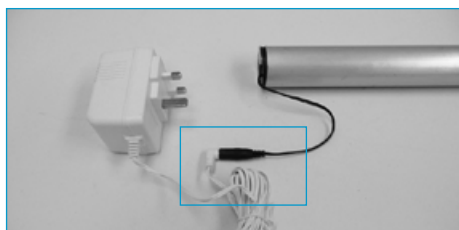

The DC transformer attaches to the motor with the supplied jack.

Remote control & channels.

The remote control can control up to 5 blinds.

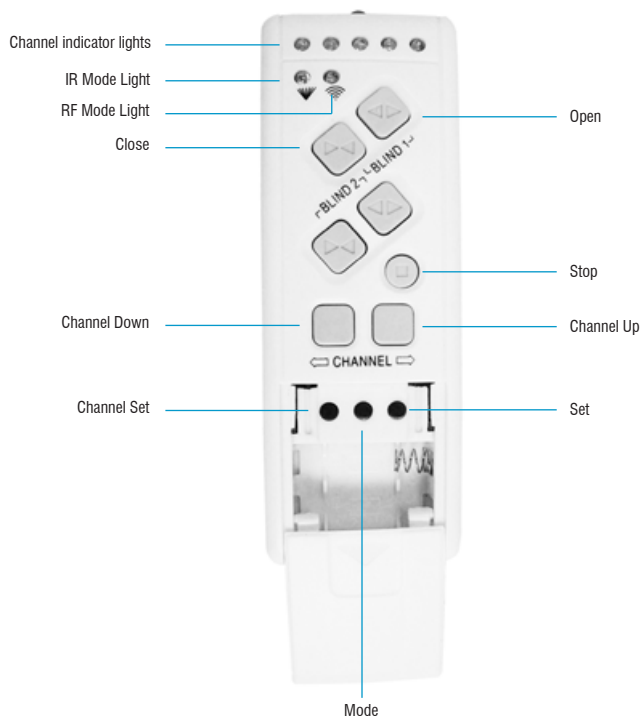

Set a Channel:

- Power on the motor and complete the next step within 20 seconds of hearing the short start-up beep.
- Press **Channel Up** or **Channel Down** to select the correct channel from the channel indicator lights at the top of the remote control.
- Hold down **Channel Set** until there is a long beep.

Set the opening and closing distances:

- Hold down **Set** for 5 seconds until there is a long beep.
- Press **Open** and when a suitable position is reached for the open limit press **Stop**.
- While continuing to hold **Stop**, press the **Open** button until there is a long beep.
- Now press **Close** and when a suitable position is reached for the close limit press **Stop**.
- While continuing to hold **Stop**, press the **Close** button until there is a long beep.

Set multiple motors to the same Channel:

- Set the Channel for each motor as above, making sure only one motor is powered on at a time and that the same channel is selected for all motors.